

# UNDERSTELL SOM PASSER TIL ZITZI DELFI PRO

**Delfi Pro Str. 0**



**Flipper G2 str. 2**



**Flipper G2 str. 2 manuell**

Art. nr.: 844303K

HMS. nr.: 293466

**Flipper G2 str. 2 El.**

Art. nr.: 844304K

HMS. nr.: 293462

**Flipper G2 str. 2 El./El. tilt**

Art. nr.: 844320K

HMS. nr.: 293464

**Guppy G2 str. 1**



**Guppy G2 str. 1 manuell**

Art. nr.: 386601

HMS. nr.: 288376

**Delfi Pro Str. 1**



**Flipper G2 str. 2**



**Flipper G2 str. 2 manuell**

Art. nr.: 844303K

HMS. nr.: 293466

**Flipper G2 str. 2 El.**

Art. nr.: 844304K

HMS. nr.: 293462

**Flipper G2 str. 2 El./El. tilt**

Art. nr.: 844320K

HMS. nr.: 293464

**Guppy G2 str. 1**



**Guppy G2 str. 1 manuell**

Art. nr.: 386601

HMS. nr.: 288376

## Delfi Pro Str. 2



## Flipper G2 str. 2



### Flipper G2 str. 2 manuell

Art. nr.: 844303K

HMS. nr.: 293466

### Flipper G2 str. 2 El.

Art. nr.: 844304K

HMS. nr.: 293462

### Flipper G2 str. 2 El./El. tilt

Art. nr.: 844320K

HMS. nr.: 293464

## Guppy G2 str. 1



### Guppy G2 str. 1 manuell

Art. nr.: 386601

HMS. nr.: 288376

## Flipper Flex G2



### Flipper Flex G2 manuell

Art. nr.: 844340

HMS. nr.: 288368

### Flipper Flex G2 El.

Art. nr.: 844341

HMS. nr.: 288369

### Flipper Flex G2 El. hev/senk El. tilt

Art. nr.: 844346

HMS. nr.: 290237

## Delfi Pro Str. 3



## Flipper G2 str. 3



### Flipper G2 str. 3 manuell

Art. nr.: 844305K

HMS. nr.: 293467

### Flipper G2 str. 3 El.

Art. nr.: 844306K

HMS. nr.: 293463

### Flipper G2 str. 3 El./El. tilt

Art. nr.: 844321K

HMS. nr.: 293465

## Guppy G2 str. 1,2\*



### Guppy G2 str. 1 manuell

Art. nr.: 386601

HMS. nr.: 288376

### Guppy G2 str. 2 manuell

Art. nr.: 386606

HMS. nr.: 288377

\* avhengig av valg av hjulstørrelse

## Flipper Flex G2



### Flipper Flex G2 manuell

Art. nr.: 844340

HMS. nr.: 288368

### Flipper Flex G2 El.

Art. nr.: 844341

HMS. nr.: 288369

### Flipper Flex G2 El. hev/senk El. tilt

Art. nr.: 844346

HMS. nr.: 290237